

## DRAWING DETAILS

<b>PART NUMBER</b>	<b>REV</b>	<b>ECO</b>	<b>Honeywell</b>		
<b>50094158-008</b>	<b>A</b>	<b>0118316 02/15</b>			
<b>ARTWORK DESCRIPTION</b>			<b>DRAWN</b>	<b>MKTING</b>	<b>DATE</b>
<b>Round User Guide - MODULATION (12 Language)</b>			<b>MF</b>	<b>GC</b>	<b>02/15</b>

## LITERATURE DETAILS

<b>SPECIFICATION</b>	<b>A4 spread : 210 x 297mm : Concertina fold to 70 x 74mm</b>
<b>MATERIAL</b>	<b>70gsm Silk</b>

## SPECIAL INSTRUCTIONS

Folding Sequence

Finished Size

**Front**

**Back**

**PRINTING SPEC: REMOVE THIS PAGE BEFORE PRINTING**

## T87M2036

### Modulating Room Thermostat

EN | User Guide  
 ES | Guía del Usuario  
 FR | Guide d'installation  
 NL | Gebruikershandleiding  
 DE | Bedienungsanleitung  
 IT | Guida utente

HU | Használati utasítás  
 CZ | Uživatelský manual  
 PL | Instrukcja obsługi  
 SK | Užívateľská príručka  
 RO | Ghid utilizare  
 TR | Kullanma Kılavuzu



**T87M2036**

**Modulating  
Room Thermostat**

### User Guide


EN | Room temperature  
 ES | Temperatura ambiente  
 FR | Température ambiante  
 NL | Ruimtetemperatuur  
 DE | Raumtemperatur  
 IT | Temperatura ambiente  
 HU | Helyiség hőmérséklet  
 CZ | Pokojová teplota  
 PL | Temperatura pomieszczenia  
 SK | Izbová teplota  
 RO | Temperatura camera  
 TR | Oda sıcaklığı




EN | Boiler on  
 ES | Caldera en marcha  
 FR | Chaudière enclenchée  
 NL | Ketel aan  
 DE | Kessel ein  
 IT | Caldaia accesa  
 HU | Kazán bekapcsolva  
 CZ | Zapnutý kotel  
 PL | Kocioł włączony  
 SK | Kotel je zapnutý  
 RO | Cazan pornit  
 TR | Kazan/kombi çalışıyor




EN | Turn dial one click to inquire about the set temperature  
 ES | Gire el dial un clic para consultar la temperatura de consigna  
 FR | Tourner le cadran d'un « clic » pour afficher la consigne  
 NL | Verdraai de ring één klik om de ingestelde temperatuur uit te lezen  
 DE | Drehe das Drehrad um einen Schritt um den aktuelle Sollwert abzufragen  
 IT | Girare la ghiera di una posizione per visualizzare la temperatura impostata  
 HU | A beállított hőmérsékletérték lekérdezéséhez a kézikereket forgassa el az első kattanásig  
 CZ | Otočte kolečkem o jeden klik na jakoukoliv stranu a zobrazí se požadovaná teplota  
 PL | Aby odczytać temperaturę zadaną przestaw pokrętło o jedną pozycję  
 SK | Pootočením o jedno kliknutie nastavujete teplotu  
 RO | Rasuciti rozeta un clic pentru a afla temperatura de referinta  
 TR | Ayar sıcaklığını görmek için kadranı bir tık çevirin

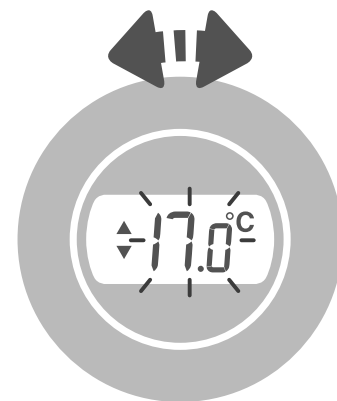

EN | Turn dial to adjust temperature setting  
 ES | Gire el dial para ajustar la temperatura de consigna  
 FR | Tourner le cadran pour ajuster la température ambiante souhaitée  
 NL | Verdraai de ring om de ingestelde temperatuur te wijzigen  
 DE | Bewege das Drehrad schrittweise um die gewünschte Temperatur zu wählen  
 IT | Girare la ghiera per impostare la temperatura ambiente  
 HU | A kívánt hőmérsékletet a kézikerek forgatásával lehet beállítani  
 CZ | Otočným kolečkem nastavíte požadovanou pokojovou teplotu  
 PL | Każda pozycja pokrętła odpowiada zmianie temperatury zadanej  
 SK | Pootočte ovládačom na nastavenie požadovanej teploty  
 RO | Rasuciti rozeta pentru a ajusta temperatura de referinta  
 TR | Ayar sıcaklığını değiştirmek için kadranı çevirin

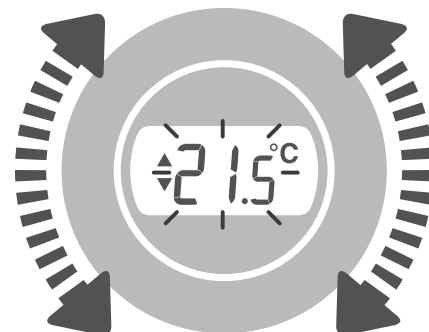

EN | **Faults**  
 ES | **Fallos**  
 FR | **Défaut**  
 NL | **Fouten**  
 DE | **Fehler**  
 IT | **Errori**  
 HU | **Hibajelenségek**  
 CZ | **Poruchy**  
 PL | **Usterki**  
 SK | **Chyby**  
 RO | **Defecte**  
 TR | **Hatalar**

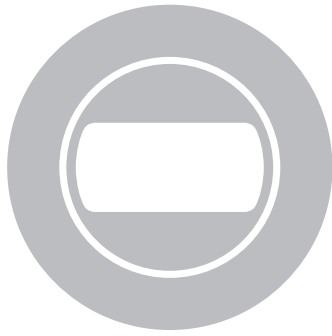


EN | **Check the wiring**  
 ES | **Compruebe el conexionado**  
 FR | **Vérifiez le câblage**  
 NL | **Controleer de bedrading**  
 DE | **Überprüfe die Verdrahtung**  
 IT | **Controllare i fili di connessione**  
 HU | **Ellenőrizze a bekötést**  
 CZ | **Zkontrolujte zapojení**  
 PL | **Sprawdź połączenia elektryczne**  
 SK | **Skontrolujte napojenie**  
 RO | **Verificati conectarea cablurilor**  
 TR | **Kabloyu kontrol edin**




EN | **Contact your installer**  
 ES | **Contacte a su instalador**  
 FR | **Contactez votre installateur**  
 NL | **Raadpleeg uw installateur**  
 DE | **Rufe einen Installateur**  
 IT | **Contattare l'installatore o l'assistenza**  
 HU | **Keresse az üzembhelyezőt**  
 CZ | **Porucha regulátoru, kontaktujte servis**  
 PL | **Wezwij instalatora**  
 SK | **Kontaktujte vášho servisného technika**  
 RO | **Contactati instalatorul dvs.**  
 TR | **Honeywell servisine başvurun**



EN | **See the User Guide of your boiler**  
 ES | **Vea las Instrucciones de Usuario de su caldera**  
 FR | **Voir le guide d'installation de la chaudière**  
 NL | **Raadpleeg de handleiding van uw ketel**  
 DE | **Siehe in der Bedienungsanleitung des Kessels**  
 IT | **Controllare la guida utente della caldaia**  
 HU | **Ellenőrizze a kazán használati utasításában leírtakat**  
 CZ | **Poruchové hlášení z kotle, podívejte se do manuálu ke kotli**  
 PL | **Szczegółowe informacje w instrukcji obsługi kotła**  
 SK | **Preštudujte si užívateľ'skú príručku vášho kotla**  
 RO | **Vezi ghidul de utilizare al cazanului**  
 TR | **Kazan/kombinizin kullanma kılavuzuna bakın**

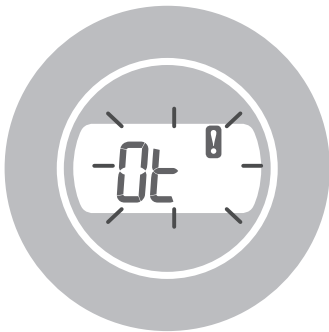

EN | **OpenTherm communication fault**  
 ES | **OpenTherm fallo de comunicación**  
 FR | **Défaut de communication OpenTherm**  
 NL | **OpenTherm communicatie fout**  
 DE | **Opentherm Kommunikationsfehler**  
 IT | **Errore di comunicazione OpenTherm**  
 HU | **OpenTherm kommunikációs hiba**  
 CZ | **OpenTherm komunikací porucha**  
 PL | **Błąd komunikacji Opentherm**  
 SK | **OpenTherm komunikáciou porucha**  
 RO | **Vina comunicare OpenTherm**  
 TR | **Opentherm iletişim hatası**

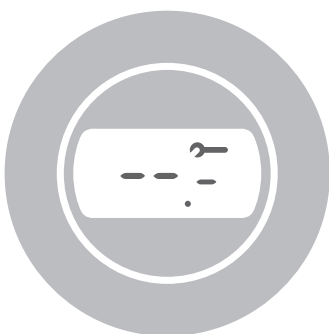

EN | **Defective thermostat**  
 ES | **termostato defectuoso**  
 FR | **Thermostat défectueux**  
 NL | **Defecte thermostaat**  
 DE | **Defekter Thermostat**  
 IT | **termostato difettoso**  
 HU | **hibás termosztát**  
 CZ | **defective thermostat**  
 PL | **Uszkodzony termostat**  
 SK | **chybný termostat**  
 RO | **termostat defect**  
 TR | **arızalı termostat**

EMC: 2004/108/EC  
 LVD: 2006/95/EC  
 WEEE: 2012/19/EC



Manufactured for and on behalf of the Environmental and Combustion Controls Division of Honeywell Technologies Sàrl, ACS-ECC EMEA, Z.A. La Pièce 16, 1180 Rolle, Switzerland by its Authorised Representative Honeywell Inc.

**Honeywell Control Systems Ltd.**  
 Newhouse Industrial Estate  
 Motherwell, Lanarkshire, ML1 5SB  
 www.honeywell.com

**Honeywell**

© 2015 Honeywell International Inc.  
 Printed in Europe. 50094158-008 A